The Ag Leader Remote Engage Foot Pedal is designed to allow the operator to easily engage or disengage the OnTrac2 or ParaDyme steering system.

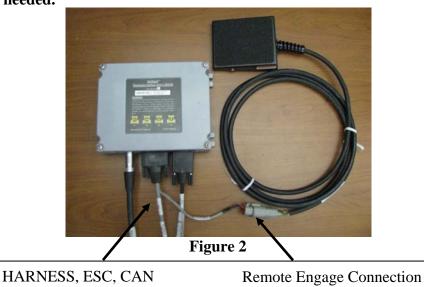


Figure 1

Foot Pedal Connection for OnTrac2 on the display.

For use with the OnTrac2 steering system the Remote Engage Foot Pedal connects to the 4-pin Deutsch connector labeled REMOTE ENGAGE and located on cable PN 201-0447-01 HARNESS, ESC, CAN near the ECU2.

Note: If the installation requires a longer cable PN: 4002140 Remote Engage Extension Cable may be needed.




Enabling the Remote Engage Foot Pedal for OnTrac2 on the display.

From the Setup Menu, go to the GPS Guidance menu



Figure 3

From the GPS Guidance menu, select the Guidance tab and then select OnTrac2 Steering from the drop down menu. Press the wrench to enter the OnTrac2 steering menu.

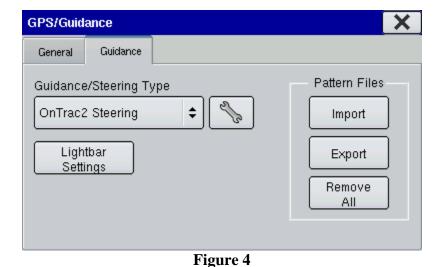

Select the tools tabs and Enable the foot pedal by pressing on the Enable Remote Switch box.

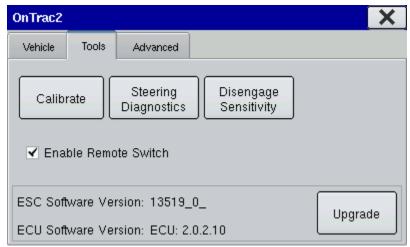


Figure 5

To test the remote engage foot pedal. Enter the Steering Diagnostics menu and select the Drive Unit tab. Pressing the foot pedal should momentarily toggle the Remote Engage indicator.


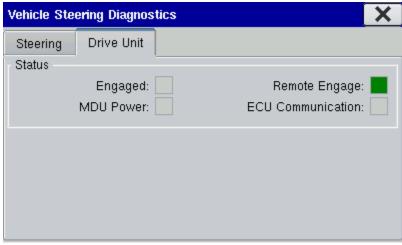


Figure 6

Foot Pedal Connection for ParaDyme on the display.

For use with the ParaDyme steering system connect the Remote Engage Foot Pedal to the 4-pin Deutsch connector labeled REMOTE ENGAGE and located near the SAM on the vehicle specific steering harness, see Figure 2.

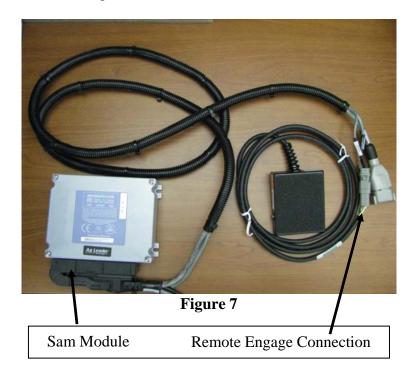

Note: If the installation requires a longer cable PN: 4002140 Remote Engage Extension Cable may be needed.

Enabling the Remote Engage Foot Pedal for ParaDyme on the display.

From the Setup Menu, go to the GPS Guidance menu



Figure 8

From the GPS Guidance menu, select the Guidance tab and then select ParaDyme Steering from the drop down menu. Press the wrench to enter the ParaDyme steering menu.

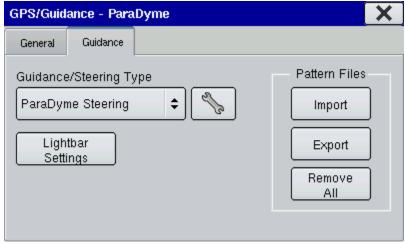


Figure 9

From the ParaDyme steering menu select the System tab and then press the Accessories button.

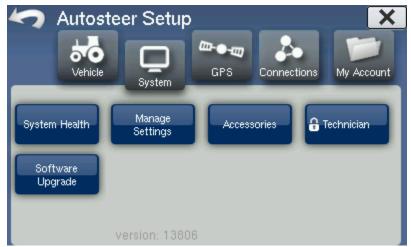


Figure 10

In the Accessories menu Enable the Remote Engage Switch by pressing on the Enable button.



Figure 11

To test the remote engage foot pedal. Press the Vehicle tab and press the Steering Components button.

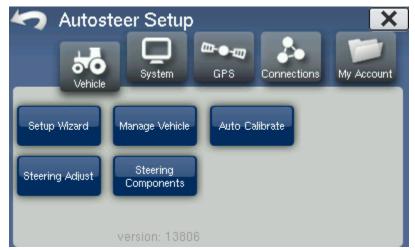


Figure 12

Scroll down and select the Remote Engage Switch. Pressing and Depressing the foot pedal will toggle the Remote Switch indicator.

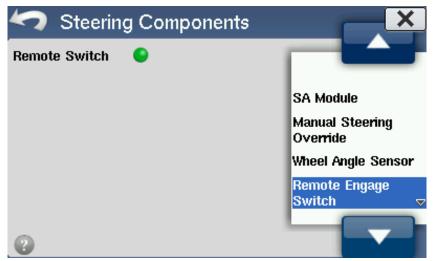


Figure 13